

## Section 1 Basic Information

This Manual has been prepared to provide Electrolux Service Personnel with Operation and Service Information for Electrolux Slide-In Ranges FGES3045K\*, CGES3045K\*, FGES3065K\*, FGES3075K\*, CGES3065K\*, FPES3085K\*, CPES3085K\*.

### Table of Contents

#### **Section 1 Basic Information**

Safe Servicing Practices .....	1-1
Table of Contents.....	1-2
Warnings and Safety Information .....	1-3
Precautions To Be Observed Before And During Servicing To Avoid Possible Exposure To Excessive Microwave Energy .....	1-4
Before Servicing .....	1-4
Danger High Voltage .....	1-4
Before Servicing .....	1-5
When Testing Is Completed .....	1-5
Microwave Measurement Procedure USA.....	1-6
Microwave Measurement Procedure Canada.....	1-7
Product Specification .....	1-8
Grounding Instructions .....	1-9
Electrical Requirements .....	1-9
Oven Diagram.....	1-10

#### **Section 2 Operation**

Operating Sequence Description.....	2-1
Off Condition .....	2-1
Cooking Condition .....	2-1
Oven Schematic-Off Condition.....	2-2
Oven Schematic-Cooking Condition.....	2-2
Touch Control Panel Assembly Outline .....	2-3
Key Unit .....	2-3
Control Unit .....	2-3
Power Level P-0 To P-90 Cooking .....	2-4
Power Output Reduction.....	2-4
Ventilation Methods Hot Air Exhaust .....	2-4
Sensor Cooking Condition .....	2-5
Cooking Sequence.....	2-5
Component Descriptions .....	2-6
Door Open Mechanism .....	2-6
Door Sensing And Secondary Interlock Switch .....	2-6
Monitor Switch .....	2-6
Thermal Cut-Out (Cavity).....	2-6
Turntable Motor .....	2-7
Cooling Fan Motor .....	2-7
Hood Fan Motor .....	2-7
Thermostat (60°Con).....	2-7
Antenna Motor .....	2-7
Cook Top Lamp.....	2-7
Humidity Sensor Circuit.....	2-8

#### **Section 3 Troubleshooting and Testing**

Warnings and Cautions.....	3-1
Troubleshooting Guide Chart.....	3-2
Test Procedures .....	3-3

#### **Section 4 Component Teardown**

Warnings and Cautions .....	4-1
Removal Of Oven From Wall .....	4-2
Hood Louver Removal .....	4-2
Outer Case Removal.....	4-2
Control Panel Assembly And Control Unit Removal..	4-3
Servicing The Touch Control Panel .....	4-3
Power Transformer Removal .....	4-4
Hood Fan Motor, Hood Duct, Oven Lamp Socket And Humidity Sensor Removal.....	4-5
Magnetron Removal .....	4-6
High Voltage Rectifier And High Voltage Hood Fan Thermostat (60°C On) Removal .....	4-7
Cooling Fan Motor Removal .....	4-7
Antenna Motor Removal .....	4-9
Stirrer Cover And Stirrer Antenna Installation .....	4-9
Oven Lamp Removal .....	4-9
Positive Lock® Connector (No-Case Type) .....	4-9
Door Sensing Switch, Secondary Interlock Switch And Monitor Switch Removal .....	4-10
Door Sensing Switch, Secondary Interlock Switch, And Monitor Switch Adjustment .....	4-10
Door Replacement.....	4-11
Door Disassembly.....	4-12
Turntable Motor Removal.....	4-13
Cook Top Lamp Socket Removal.....	4-13

#### **Section 5 Wire Diagrams**

Wiring Schematic Oven ON Condition .....	5-1
Pictorial Component Diagram .....	5-2
Wiring Diagram .....	5-3

#### **Section 6 Parts List**

Parts Listing.....	6-1
Oven And Cabinet Parts Exploded View.....	6-3
Control Panel Exploded View .....	6-4
Door Parts FGMV185KW & FGMV185KB .....	6-5
Door Parts FGMV185KF & FGMV189KF.....	6-6
Packing and Accessories Exploded View .....	6-7