

## NEW FEATURES

### **BROKEN BELT SWITCH**

To prevent clothing damage if a drum belt breaks, these dryers immediately cease operation. This is accomplished by mounting a switch on the idler pulley mechanism. The switch is in series with the drive motor and opens the circuit to the motor if belt tension is removed from the idler pulley.

### **LINT SCREEN LOCATION**

The lint screen is located in a slot at the bottom of the door opening. Removal for cleaning is easier and air flow through the dryer drum is improved.

### **EASY-UNLOADER BUTTONS (LIMITED EDITION ONLY)**

To remove small clothing articles, which may be resting on a drum baffle out of sight, the customer presses a button on each side of the door opening. The motor will rotate the drum approximately 1/2 revolution, then shut off.

### **DRYER EXHAUSTING**

Flexible duct, inside the dryer cabinet, and removable cabinet plugs make it possible to exhaust the dryer from either side, or the bottom, as well as through the rear.

