


Install the air cleaner case in the reverse order of removal.

**NOTE**


- Be sure to install the air cleaner case onto the rubber mounts correctly.
- Make sure that the connecting tube and air intake duct bands are tightened securely.
- After '86: Make sure that the resonator connecting tube band is tightened securely, aligning the boss of the resonator with the groove of the connecting tube.

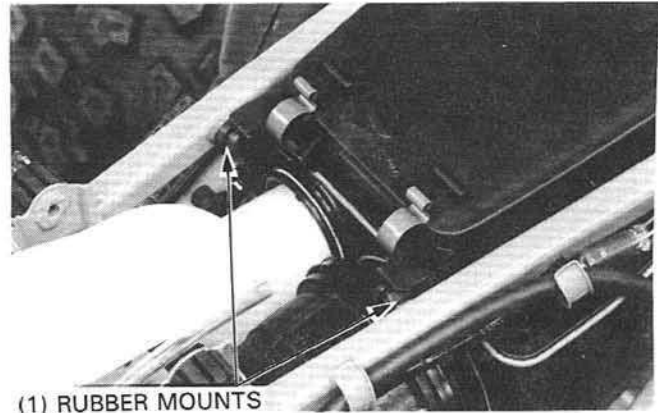


**CARBURETOR**

**REMOVAL**

Remove the seat/rear fender.  
 Turn the fuel valve "OFF."  
 Loosen the float chamber plug and drain the float chamber.  
 Disconnect the fuel line from the carburetor.  
 Loosen the connecting tube bands and remove the carburetor.

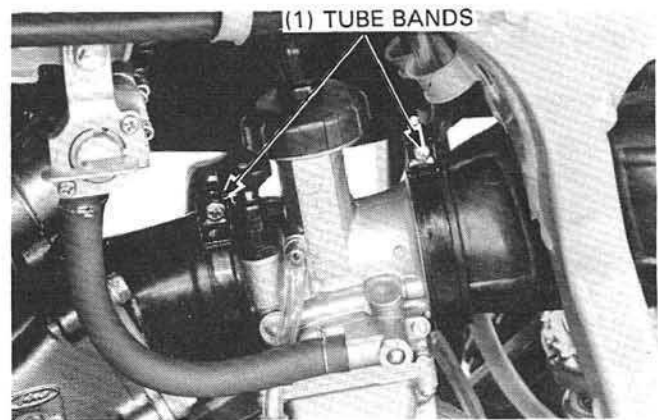

Remove the carburetor top and pull out the throttle valve.

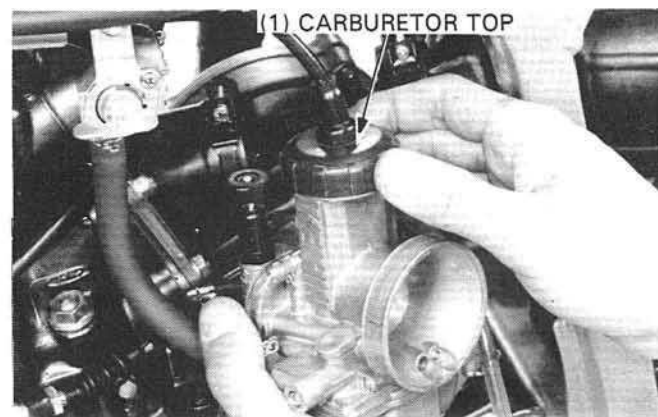

**THROTTLE VALVE DISASSEMBLY**

Remove the throttle cable from the cable holder.

