

Introduction

This service manual describes the service procedures for the TRX90.

This Model Specific Manual includes every service procedure that is of a specific nature to this particular model. Basic service procedures that are common to other Honda Motorcycle/Motor Scooter/ATVs can be found in the Common Service Manual.

This Model Specific Service Manual should be used together with the Common Service Manual in order to provide complete service information on all aspects this ATV.

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition. Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 3 apply to the whole ATV. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections. Sections 4 through 14 describe parts of the ATV, grouped according to locations.

Find the section you want on this page, then turn the table of contents on the first page of the section.

Most sections describe the service procedure through system illustration. Refer to the next page for details on how to use this manual.

If you don't know the source of the trouble, go to section 15 Troubleshooting.

Contents

	General Information	1
	Frame/Body Panels/Exhaust System	2
	Maintenance	3
Engine and Drive Train	Lubrication System	4
	Fuel System	5
	Engine Removal/Installation	6
	Cylinder Head/Cylinder/Piston	7
	Clutch/Gearshift Linkage	8
	Recoil Starter	9
	Crankcase/Transmission/Crankshaft	10
Chassis	Front Wheel/Brake/Suspension/Steering	11
	Rear Wheel/Brake/Suspension	12
Electrical	Ignition System	13
	Wiring Diagram	14
	Troubleshooting	15

Index