How To Use This Manual

This manual describes the service procedures for the TRX500FM1/FM2/FM5/FM6/FM7/FE1/FE2/FA5/FA6/FA7.

Sections 1 and 3 apply to the whole vehicle. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections.

Section 4 through 25 describe parts of the vehicle, grouped according to location.

If you are not familiar with this vehicle, read Technical Features in Section 1.


Follow the Maintenance Schedule (section 3) recommendations to ensure that the vehicle is in peak operating condition and the emission levels are within the standards set by the U.S. Environmental Protection Agency (EPA), California Air Resources Board (CARB) and Environment Canada.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedure.

Refer to the troubleshooting in each section according to the malfunction or symptom. In case of an engine trouble, refer to PGM-FI section troubleshooting first.

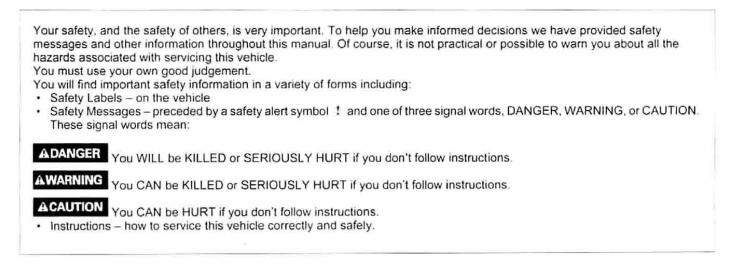

As you read this manual, you will find information that is preceded by a **NOTCE** symbol. The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

Date of Issue: September, 2014