


HOW TO USE THIS MANUAL TO LOCATE WHAT YOU ARE LOOKING FOR:

1. The text of this manual is divided into sections.
2. The section titles are listed in the GROUP INDEX.
3. Holding the manual as shown at the right will allow you to find the first page of the section easily.
4. The contents are listed on the first page of each section to help you find the item and page you need.

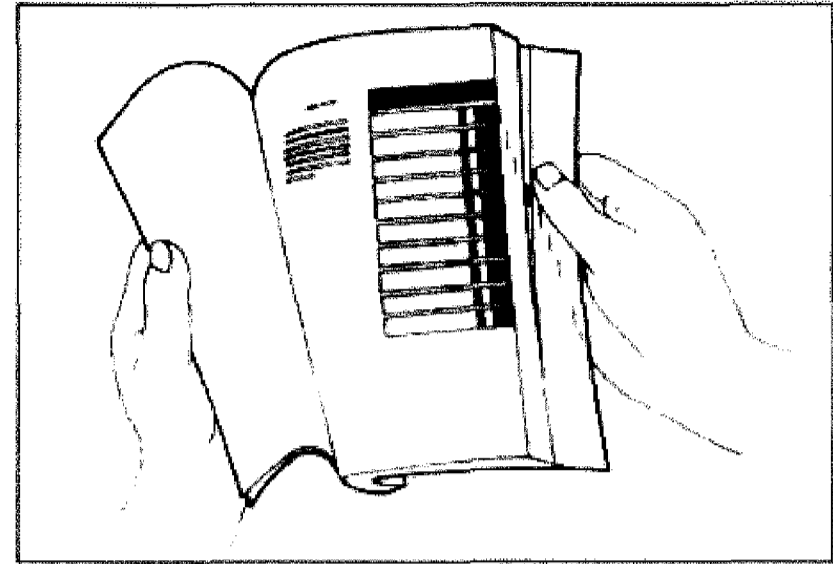

COMPONENT PARTS AND WORK TO BE DONE

Under the name of each system or unit, is its exploded view. Work instructions and other service information such as the tightening torque, lubricating points and locking agent points, are provided.

Example:

①	TP sensor
②	ISC valve
③	IAP sensor
④	Fuel delivery pipe
⑤	O-ring
⑥	Fuel injector
⑦	Cushion seal
⑧	Vacuum hose
⑨	Throttle linkage cover
⑩	IAP sensor cover
A	TP sensor mounting screw
B	ISC valve mounting screw
C	Fuel delivery pipe mounting screw

ITEM	N·m	kgf·m	lb·ft
A	2.0	0.2	1.5
B	2.0	0.2	1.5
C	5	0.5	3.5

