



G01402663

Fig. 1: Removing Intake Resonator

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Remove the battery and battery base.
6. Remove the battery cables (A) from the fuse box, and remove the harness clamps (B).