

2001 Honda Civic EX

2001 ACCESSORIES & EQUIPMENT Air Bag Restraint Systems - Civic

	Driver-Side Air Bag Inflator
<u>1-2</u>	Increased resistance In Driver-Side Air Bag Inflator
<u>1-3</u>	Short To Another Wire Or Decreased Resistance In Driver-Side Air Bag Inflator
<u>1-4</u>	Short To Power In Driver-Side Air Bag Inflator
<u>1-5</u>	Short To Ground In Driver-Side Air Bag Inflator
<u>2-1</u>	Open Or Increased Resistance In Passenger-Side Air Bag Inflator
<u>2-3</u>	Short To Another Wire Or Decreased Resistance In Passenger-Side Air Bag Inflator
<u>2-4</u>	Short To Power In Passenger-Side Air Bag Inflator
<u>2-5</u>	Short To Ground In Passenger-Side Air Bag Inflator
<u>3-1</u>	Open In Left Front Pretensioner
<u>3-2</u>	Increased Resistance In Left Front Pretensioner
<u>3-3</u>	Short To Another Wire Or Decreased Resistance In Left Front Pretensioner
<u>3-4</u>	Short To Power In Left Front Pretensioner
<u>3-5</u>	Short To Ground In Left Front Pretensioner
<u>4-1</u>	Open In Right Front Pretensioner
<u>4-2</u>	Increased Resistance In Right Front Pretensioner
<u>4-3</u>	Short To Another Wire Or Decreased Resistance In Right Front Pretensioner