



## Procedure

1. Make sure the drive being replaced is not in use by any application and that removing it will not disrupt the RAID scheme in use.
2. Press the handle on the front of the drive module so that the handle pops out.

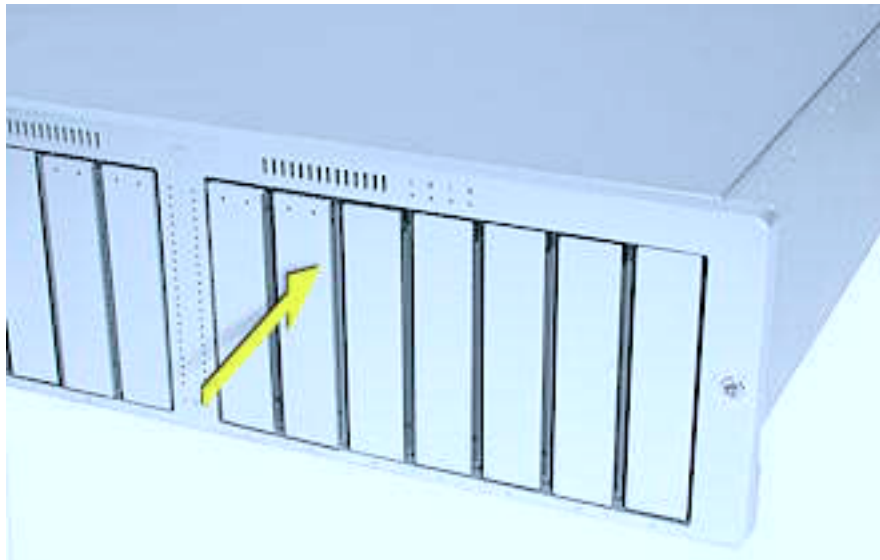

3. Wait for the right LED on the drive to go out. Then grasp the drive handle, and pull the drive module out of the system.

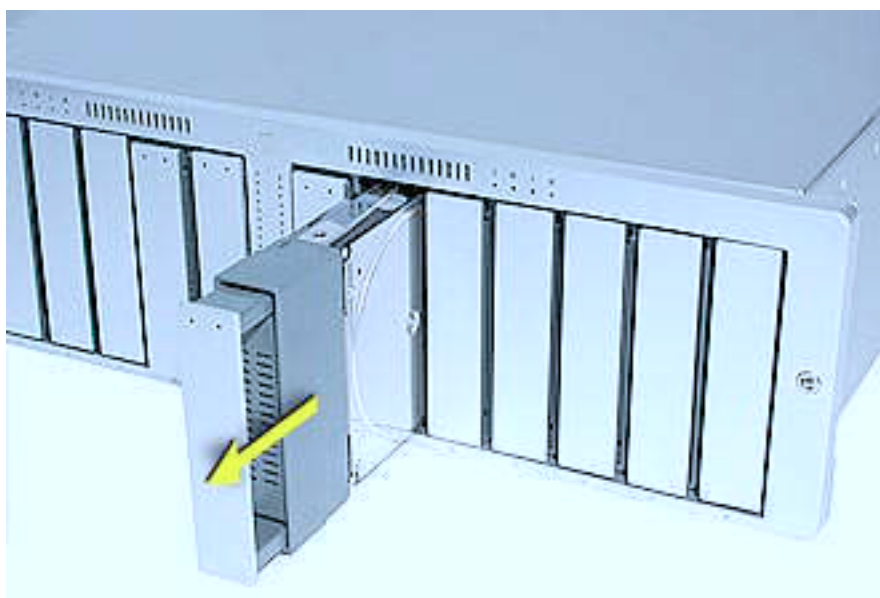

**Important:** To maintain proper airflow, do not leave a drive bay empty. If you permanently remove a drive, replace it with a blank drive module.