



CMP SENSOR SIGNAL

-  **09930-89910 : 4-pin test cord**
09930-99320 : Digital tester
 **Tester range : $\overline{\text{---}}$ V (DC voltage)**

- (1) Rremote CMP sensor from engine. (See page 3-48)
- (2) Connect the test cord as shown, then turn ignition switch ON.
- (3) Connect the tester probe (+) (Red) to terminal.

Terminal	Wire color	
	Engine	Test cord
E2	O/G	O/G

- (4) Connect the tester probe (–) (Black) to body ground.
- (5) Measure voltage when steel tip of a screwdriver is brought near and then pulled away from sensor tip \textcircled{A} .

CMP sensor signal : Approx. 0.3 V or 5 V

NOTE:

Two signal voltages mentioned above (0.3 V or 5 V) will change by repeating movement of screwdriver.

