



4. Compress the mounting bracket and make sure the dust seals are fully seated. Install the brake pads. Clean the disc and pads with brake parts cleaner or denatured alcohol to remove any dirt, oil or grease.



Installation

5. Install caliper on hub strut, and torque mounting bolts to specification.

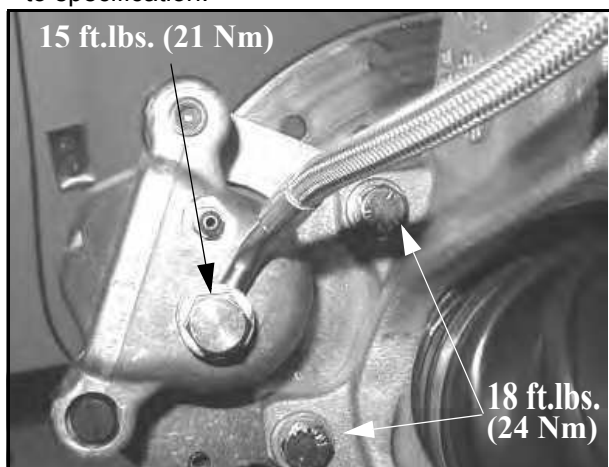

Brake Caliper Mounting Bolt Torque:
18 ft.lbs. (24 Nm)

6. Install brake line and torque the banjo bolt to specification.



Brake Line Banjo Bolt Torque:
15 ft.lbs. (21 Nm)

7. Install the adjuster screw and turn until stationary pad contacts disc, then back off 1/2 turn.



8. Perform brake bleeding procedure as outlined earlier in this chapter.
9. Install wheels and torque wheel nuts to specification. Refer to Chapter 2.