




MAINTENANCE

Measure the brake pedal free play at the end of the brake pedal.


BRAKE PEDAL FREE PLAY:
15–20 mm (5/8–3/4 in)

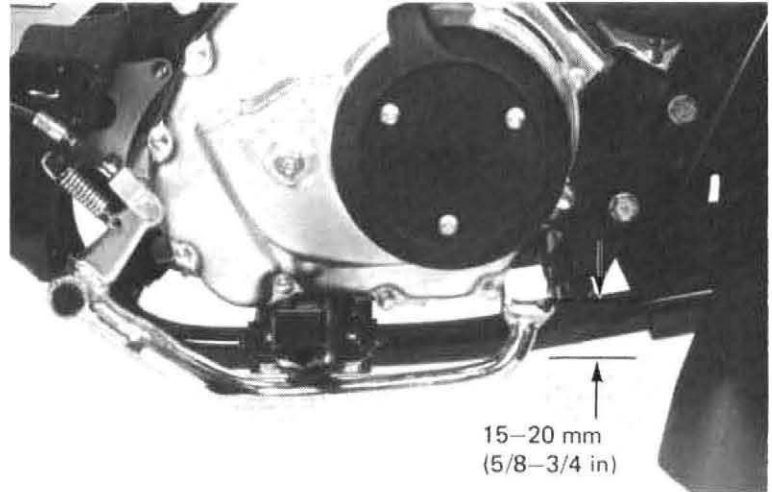

Measure the rear brake lever (parking brake) free play at the end of the brake lever.

REAR BRAKE LEVER FREE PLAY:
15–20 mm (5/8–3/4 in)

Apply the parking brake to lock the rear wheels. Minor adjustments can be made with the cable adjuster on the rear brake lever.

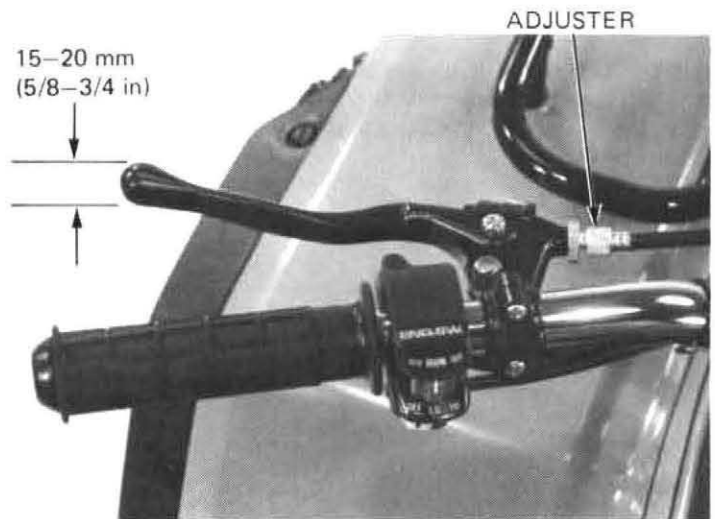

The lever free play can also be adjusted at the lower end of the cable.

Adjust the rear brake and pedal free play by turning the adjusting nuts at the lower end of the cables.

NOTE:

Make sure the cut-out of each adjusting nut is seated on the brake arm pin.

