


1988B thru 1989A MODELS

6. Install speed control cable.
 - Position speed control assembly (A) to stator plate.
 - Install screw (B) and nut (C).
7. Attach ground lead (D) and plug in lead (E).

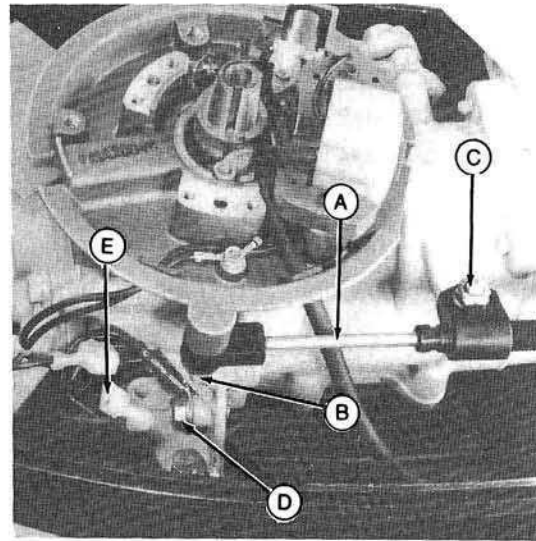


8. Tighten stator plate friction screw (A).

IMPORTANT

Tighten stator plate friction screw tight enough so that stator plate will not creep at W.O.T.

9. Install flywheel.

SEE INSTALLING FLYWHEEL IN THIS SECTION FOR MORE INFORMATION.

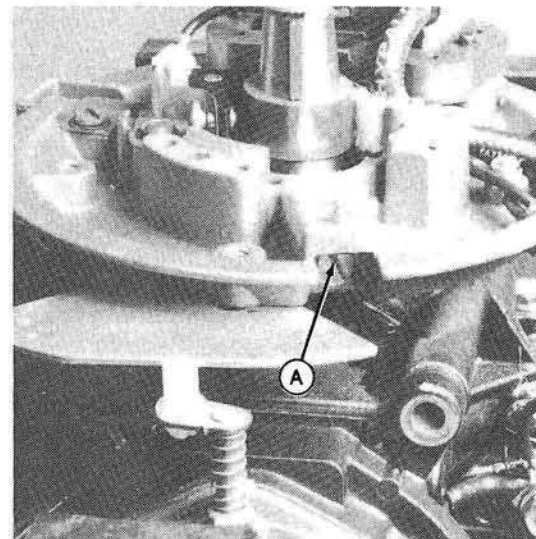

T. TESTING LANYARD SWITCH (1988 B AND NEWER)

1. Start motor.
2. Pull lanyard (A) from lanyard switch (B).

OBSERVE	WHAT TO DO
Engine quits running.	Switch is OK.
Engine keeps running.	Go to next step.

